

fig. 22

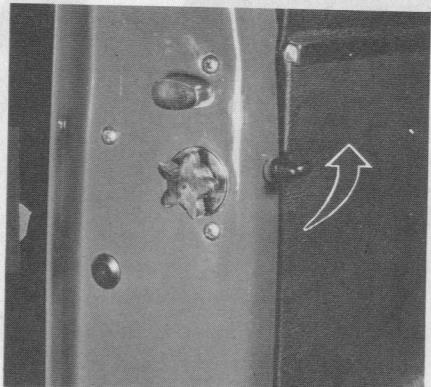


fig. 23

DOORS — Fig. 22.

To open the door from the inside, grasp the handle and press the trigger 1 toward the rear of the car. Simultaneously, push the door outward with the forearm. When fully opened the doors are held by a retractable door check.

To lock the doors from outside.

Trigger 1 also serves the purpose of locking the doors. To do this move it toward the front until a click is heard.

Both the front doors must be locked from outside with the key.

To unlock the trigger 1 press on CATCH 2.

To lock the doors from inside.

Both the rear doors cannot be opened from outside once they are locked with trigger 1 fig. 22, but the front doors can be opened as explained before. If you wish to secure the front doors while sitting inside the car, raise the lever fig. 23. Once this is done, the front doors cannot be opened from outside NOT EVEN WITH A KEY.

CARPETS

To remove the carpets, simply lift the tabs from the clips.